

LUV - CARRIER ERROR CODES

LUV

9. Troubleshooting

9.1 Indoor Unit Error Display

Display	LED STATUS
E0	EEPROM parameter error
E1	Indoor unit and outdoor unit communication protection
E2	Zero-crossing signal error
E3	Indoor fan speed has been out of control
E5	Open or short circuit of outdoor temperature sensor or outdoor unit EEPROM parameter error
E6	Open or short circuit of room or evaporator coil temperature sensor
E7	Outdoor fan speed has been out of control
P0	IBM malfunction or IGBT over-strong current protection
P1	Over voltage or too low voltage protection
P2	Temperature protection of compressor top.
P4	Inverter compressor drive error

Note: E4 & P3: Reserved function.