

## Troubleshooting

### Indoor unit error display

For 5k,7k, 9k,12k,18k R series :

Operation lamp	Timer lamp	Failure
☆	X	Indoor fan speed has been out of control
☆	O	The T1 or T2 sensor is open circuit or short circuit
X	☆	Over current protection occurs 4 times.
O	☆	EEPROM error
☆	☆	Zero crossing detection error

For 21k,24k,30k R series ::

Operation lamp	Timer lamp	Defrosting lamp	Auto lamp	Failure
☆	☆	☆	X	Over current protection occurs 4 times.
☆	X	X	X	The T2 sensor is open circuit or short circuit
X	☆	X	X	The T1 sensor is open circuit or short circuit
X	X	☆	X	The T3 sensor is open circuit or short circuit
☆	☆	X	X	EEPROM error
X	X	X	☆	Indoor / outdoor units communication error
X	X	☆	☆	Outdoor units protection

For 36k Elite series

Operation lamp	Auto lamp	Def. lamp	Timer lamp	Failure
☆	☆	☆	☆	Over current protection occurs 4 times
☆	X	X	☆	EEPROM error
X	X	X	☆	The T1 sensor is open circuit or short circuit
☆	X	X	X	The T2 sensor is open circuit or short circuit
X	X	☆	X	The T3 sensor is open circuit or short circuit
X	☆	X	X	Communication malfunction between indoor unit and outdoor unit
X	☆	☆	X	Outdoor unit has protection

O (light) X (off) ☆ (flash)