 




HOW TO OPERATE SAMSUNG REMOTE CONTROLLER

 
Instruction of Function :

Remote controller buttons

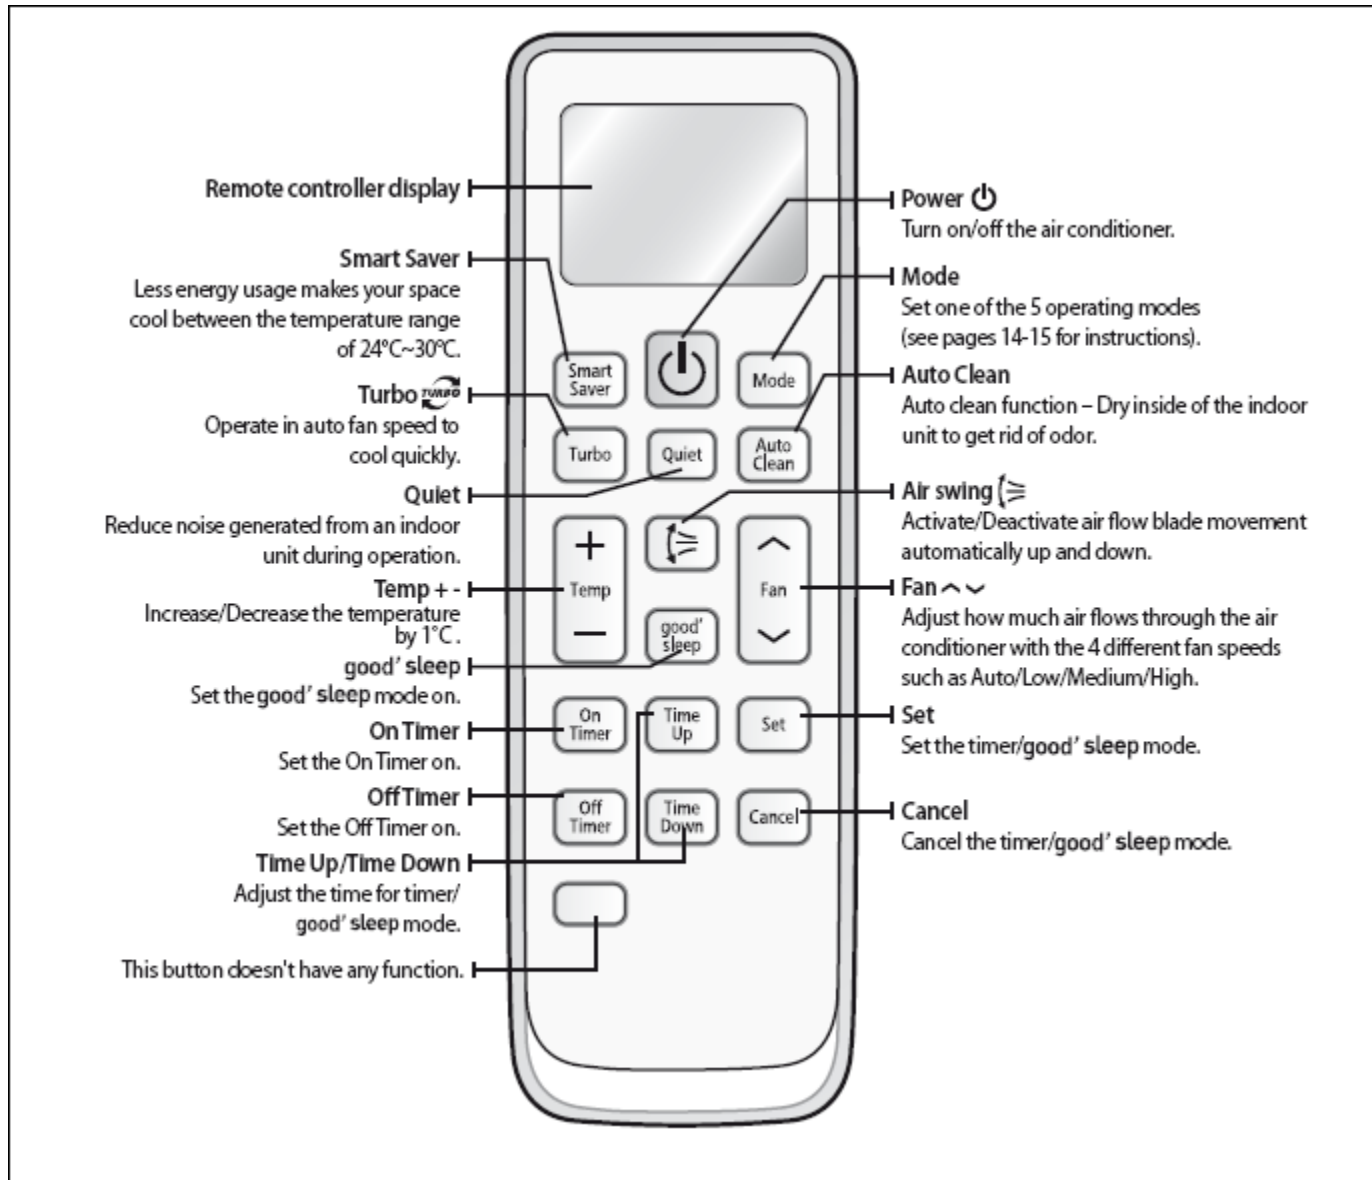

Instruction of Function :

Remote controller display

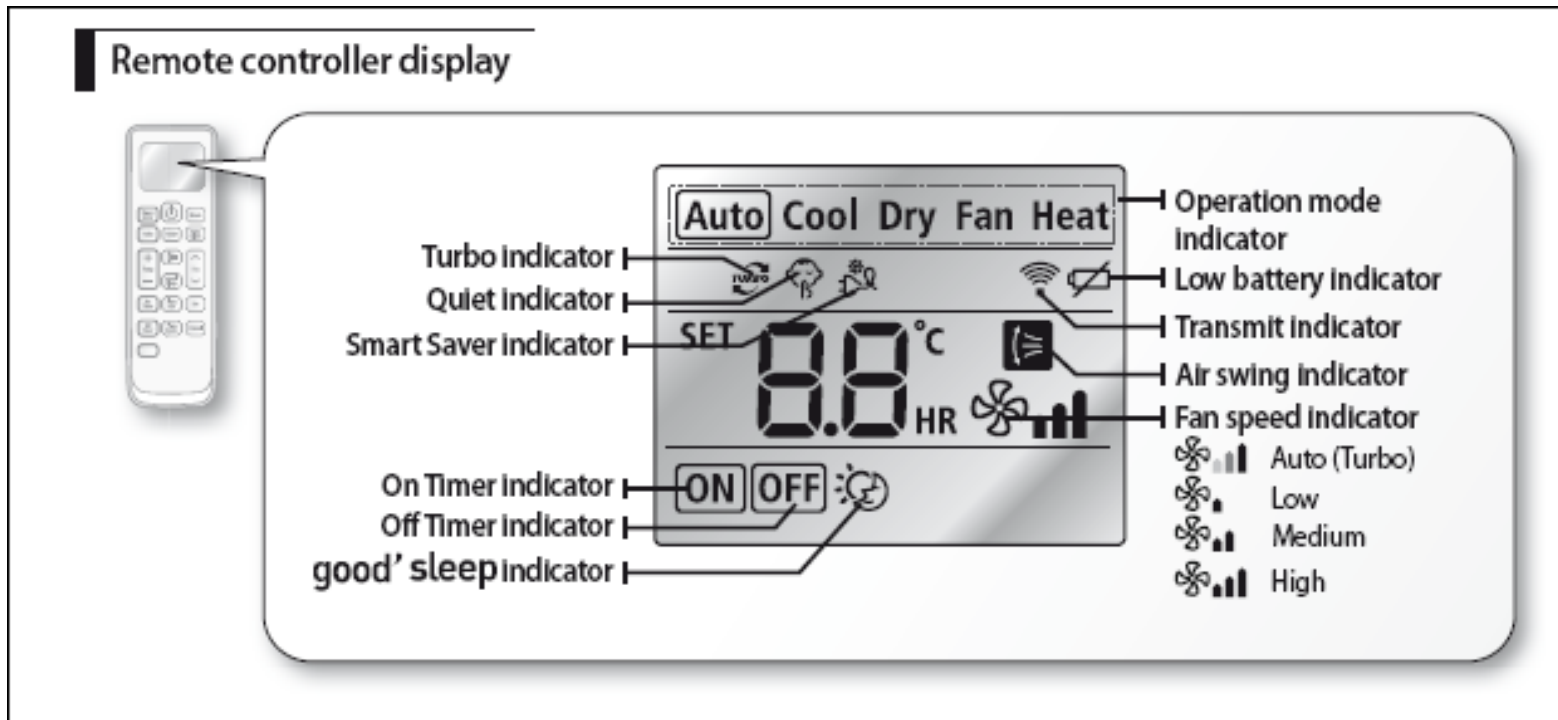

Instruction of Function :


Basic Function

Auto	In Auto mode, the air conditioner will automatically set the temperature and fan speed depending on the room temperature detected by the room temperature.
Cool	In Cool mode, the air conditioner will cool your room. You can adjust the temperature and the fan speed to feel cooler in hot season.
Dry	The air conditioner in Dry mode acts like a dehumidifier by removing moisture from the indoor air. Dry mode makes the air feel refreshing in a humid climate.
Fan	Fan mode can be selected to ventilate your room. Fan mode will be helpful to refresh the stale air in your room.
Heat	The air conditioner heats as well as cools. Warm your room with this versatile appliance in the code of winter.





 

 

 




Instruction of Function :


Remote Controller

Press the  button to turn on the air conditioner.

Press the  button to set the operating mode.

 Press the  button to set the desired fan speed.

Auto	 (Auto)
Cool	 (Auto),  (Low),  (Med),  (High)
Dry	 (Auto)
Fan	 (Low),  (Med),  (High)
Heat	 (Auto),  (Low),  (Med),  (High)

Press the  button to adjust the temperature.

Auto	You can adjust the desired temperature by 1°C within the range of 16°C~30°C.
Cool	You can adjust the desired temperature by 1°C within the range of 16°C~30°C.
Dry	Temperature adjustment is not possible.
Fan	Temperature adjustment is not possible.
Heat	You can adjust the desired temperature by 1°C within the range of 16°C~30°C.

Instruction of Function :

Remote Controller

Adjusting the air flow direction

Vertical air flow

Air flow blades move up and down.



Press the **Air swing** button on the remote controller.

- ▶ Air swing indicator will be on and air flow blades move up and down continuously to circulate the air.
- ▶ Press the **Air swing** button on the remote controller again, to keep the air flow direction in a constant position.

 


Horizontal air flow

Make sure one of the blade pin lever that stick out of the air flow blades are not broken.



Move the blade pin lever left or right to keep the air flow direction in a constant position you prefer.

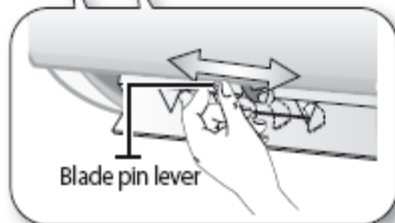

- Be extremely careful with your fingers while adjusting the Horizontal air flow direction. There is a potential risk of personal injury when the unit is mishandled.

Instruction of Function :

Remote Controller

Using the Turbo function

 
Turbo function will be helpful to cool your room quickly and effectively.



Press the **Turbo** button on the remote controller during Cool mode.

- ▶ Turbo indicator appears on the remote controller display and the air conditioner operates in Turbo function for 30 minutes.

Cancel Press the **Turbo** button once again.

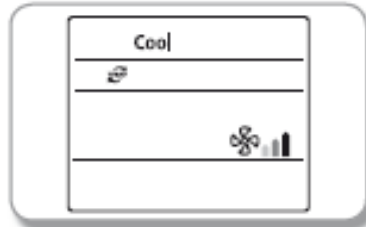


- Turbo function is only available in Cool mode.
- If you press the **Mode** button while the Turbo function is on, it will cancel the function.
- Temperature/Fan speed cannot be adjusted while using this function.

Instruction of Function :

Remote Controller

Good sleep mode

 For a comfortable sleep, the air conditioner will operate it Fall asleep ▷ Sound sleep ▷ Wake up from good' sleep mode.

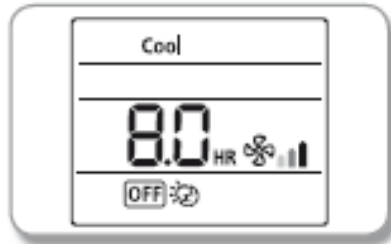

When the air conditioner is on and in cool/heat mode

1. Press the **good' sleep** button on the remote controller.
 - ▶ **good' sleep** indicator appears and Off timer indicator starts blinking on the remote controller display.
2. Press the **Time Up** or **Time Down** button to set the time.
 - ▶ You can set the time in half hourly unit from 30 minutes ~ 3 hours and hour unit from 3 hours ~ 12 hours.
 - ▶ Operating hour can be set from minimum 30 minutes to maximum 12 hours.
 - ▶ Default operation hour is set to 8 hours.
3. Press the **Set** button to active it on.
 - ▶ Off timer indicator stops blinking and reserved time will be displayed for 3 seconds. Then the air conditioner operates in good'sleep mode.
 - ▶ If you don't press **Set** button within 10 seconds after pressing the **good' sleep** or **Time Up** or **Time Down** button, the air conditioner will return to previous status. Check Off timer indicator and **good' sleep** indicator on the indoor unit.

Instruction of Function :

Remote Controller

 
Setting the On/Off timer


Setting On timer while the air conditioner is off / Off timer while the air conditioner is on.

You can set the air conditioner to turn on/off automatically at desired time.



Setting On timer while the air conditioner is off / Off timer while the air conditioner is on

Setting On timer

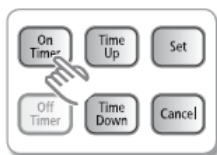

1. Press the **On Timer/Off Timer** button.
 - ▶ On/Off timer indicator will blink on the remote controller display.
2. Press the **Time Up** or **Time Down** button to set the time.
 - ▶ You can set the time in half hourly unit from 30 minutes ~ 3 hours and hour unit from 3 hours ~ 24 hours.
 - ▶ Operating hour can be set from minimum 30 minutes to maximum 24 hours.
3. Press the **Set** button to active it on.
 - ▶ On timer indicator stops blinking and reserved time will be displayed for 3 seconds.
 - ▶ If you don't press **Set** button within 10 seconds after selecting the time the air conditioner will return to previous status. Check On timer or Off timer indicator and  Indicator on the indoor unit.

  Setting Off timer

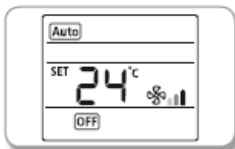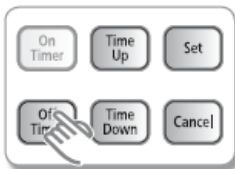

Cancel Press the **Cancel** button.

Additional options available in On timer mode

Mode You can select from Auto/Cool/Dry/Fan/Heat.

+ Temp - You can adjust the temperature in Auto/Cool/Dry/Heat mode.



- Only the latest setting timer will be applied between the On Timer/Off Timer and good' sleep Off timer functions.
- After setting the timer, the set time will be displayed for 3 seconds before it disappears.

 
Instruction of Function :

Remote Controller

Using the Smart Saver function

This function will set the temperature range limit to help you save energy while the air conditioner is operating in Cool mode.

This function will set the temperature range limit to help you save energy while the air conditioner is operating in Cool mode.

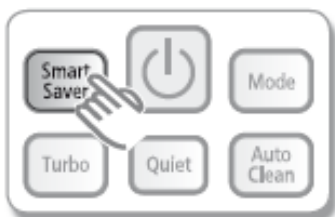

Press the **Smart Saver** button on the remote controller while the air conditioner is operating in Cool mode.

- ▶ Smart Saver indicator and air swing indicator appears automatically on the remote controller display.
The air flow blades move up and down.
- ▶ If the current set temperature is lower than 24°C, it will automatically raise to 24°C.



Cancel Press the **Smart Saver** button once again.



 
- Smart Saver function is only available in Cool mode.
- When Smart Saver function is activated, temperature range will be limited to 24°C~30°C.
- If the desired temperature is lower than 24°C, turn off the Smart Saver function by pressing the **Smart Saver** button again.
- Temperature/Fan speed can also be adjusted (see page 15 for instructions).
- Air flow can be adjusted manually (see page 16 for instructions).
- If you press the **Mode** button while the Smart Saver function is on, it will cancel the function.

Instruction of Function :

Remote Controller

Using the quiet function


You can reduce the noise generated from an indoor unit.

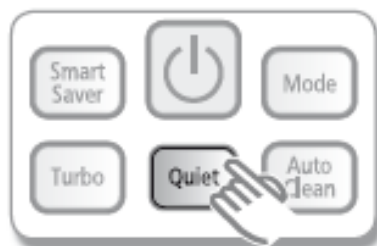

Press the **Quiet** button on the remote controller while the air conditioner is operating in Cool/Heat mode.

- ▶ Quiet indicator appears on the remote controller display.
- ▶ The indoor unit will operate more quietly.

 Cancel Press the **Quiet** button once again.

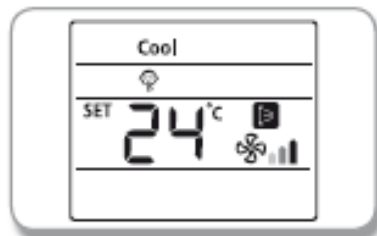

- If using a multi system, this function will work only when the Quiet function is set on all operated indoor units.

Instruction of Function :


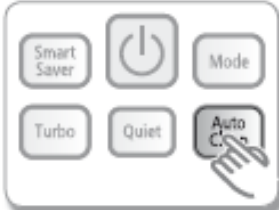 
Remote Controller

Using the Auto Clean function (Certain models)

Auto clean function will prevent from growing mold by eliminating the moisture inside of the indoor unit. Your indoor unit evaporates the moisture inside of the unit. Activate this function to provide you with more clean and healthier air.

Using the Auto Clean function

Auto clean function will prevent from growing mold by eliminating the moisture inside of the indoor unit. Your indoor unit evaporates the moisture inside of the unit. Activate this function to provide you with more clean and healthier air.



Press the Auto Clean button.

When the air conditioner is turned off,

- ▶ The Auto clean indicator on the indoor unit display appears and the Auto clean function runs.

When the air conditioner is turned on,

- ▶ After stopping the air conditioner operation, the Auto clean indicator on the indoor unit display appears and the Auto clean function runs.

※ Auto Clean time can vary, depending on the previously used mode.
Auto(cool), Cool, Dry mode : approximately 30 minutes.
Auto(heat), Heat, Fan mode : approximately 15 minutes.

Cancel Press the Auto Clean button once again.

NOTE • When the air conditioner is turned on, the Auto clean function runs after stopping the air conditioner operation.